

Signs Manager

The Signs Manager module allows you to record the location of a sign, the latest condition, and attributes such as sign type, installation type, and sign dimensions.

For more information, see the following topics:

- [Sign Inventory](#)