## **Pavement Analyst Master Files Configuration**

The following tasks need to be performed to create and update the Master Files (Network Master and Performance Master). After the Master Files data have been configured, the system can be populated with the corresponding data and allow pavement users to run network and performance analysis. See Pavement Analyst User Guide for details.

- Configure Network Master
  Pavement Management Sections Configuration
- Configure Performance Master